



magnetic light

microlights

Disc Brake Installation

Step 1



Check arm length- Too long?
→ Remove spacers (1.a- 1.e)

1.a



Loosen arm with big Allen key

1.b



As needed:
Push 1/2/3 spacers out by hand

1.c



Snap remaining parts together

1.d




Tighten arm again with Allen key

1.e



Distance ok → Step 2

Step 2

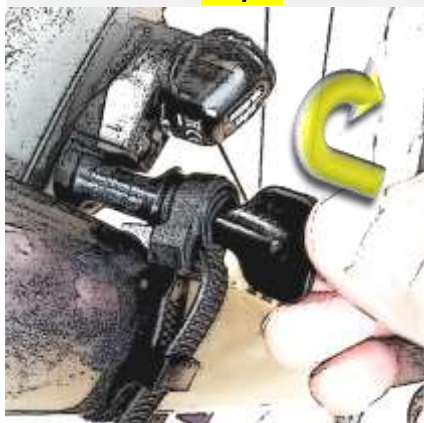


Tighten strap with plastic wrench

Step 3




Adjust lamp parallel to the rim
& tighten the arm

Step 4

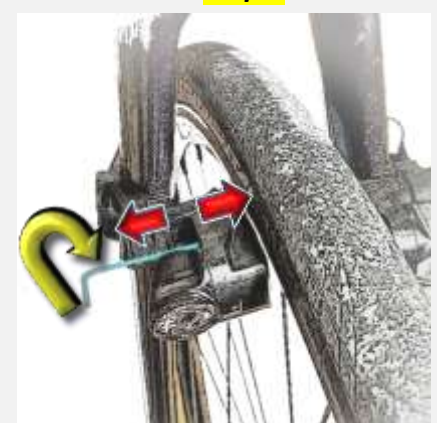

Adjust to a distance of 1–2 mm
(use small Allen key)

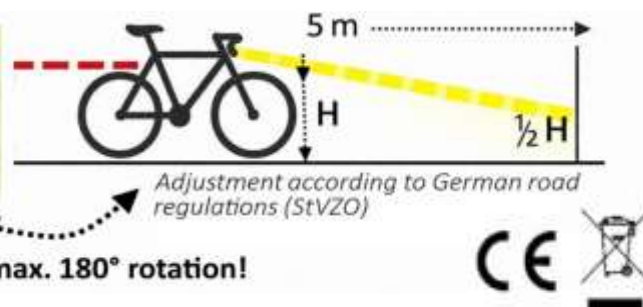

Technical specifications:

Generator output:	0.1–0.5 W
Voltage:	2–5V AC
Light output:	11 lux (15 km/h) 20 lux (25 km/h)
Standlight (rear light)	4–10 minutes
Weight (per lamp)	49 g